


Thank you for buying our dual brake ACAR-B7D!

1. In the packing box, you will find below parts:



1) One kit dual brake



2) One bag hardware

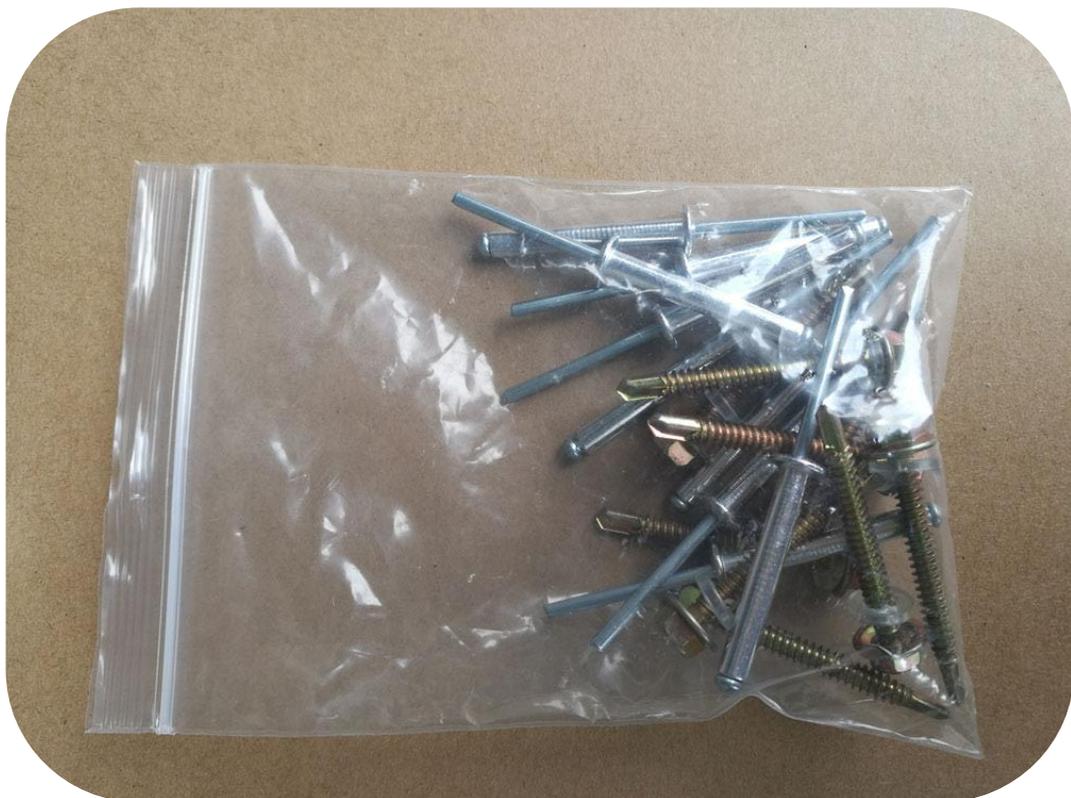


2. To install the dual brake, you need to prepare below tools:

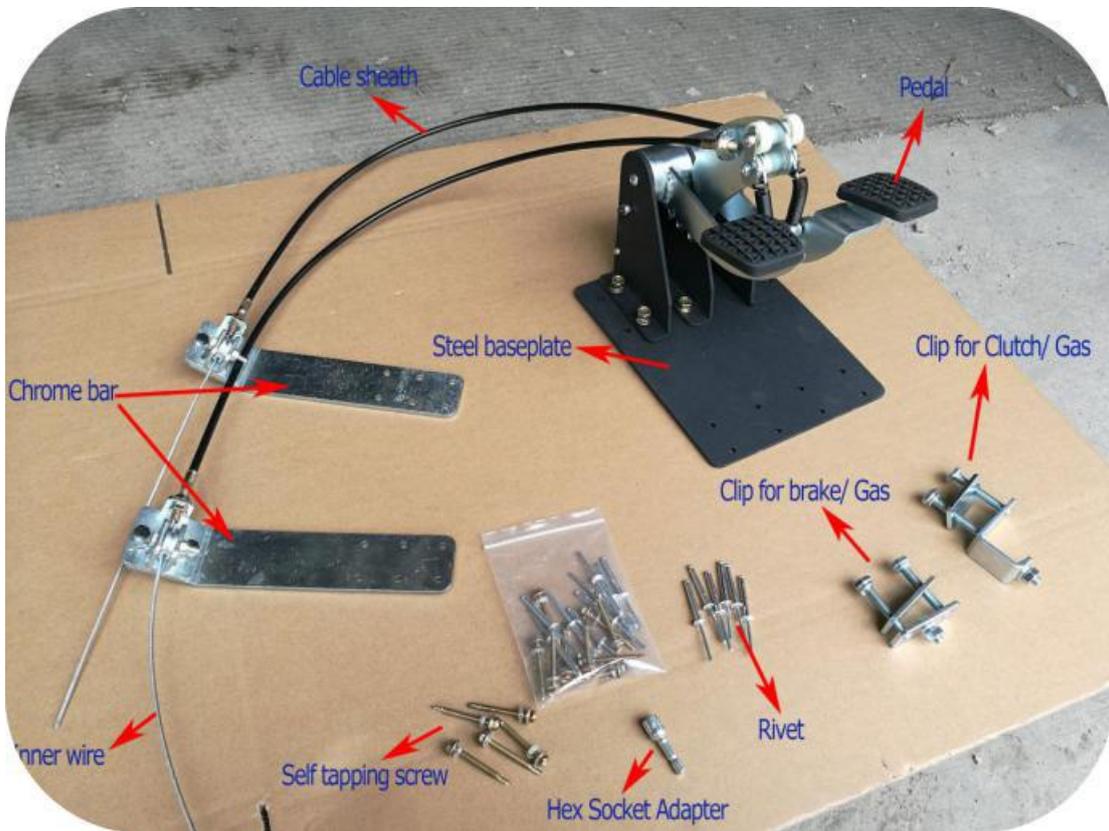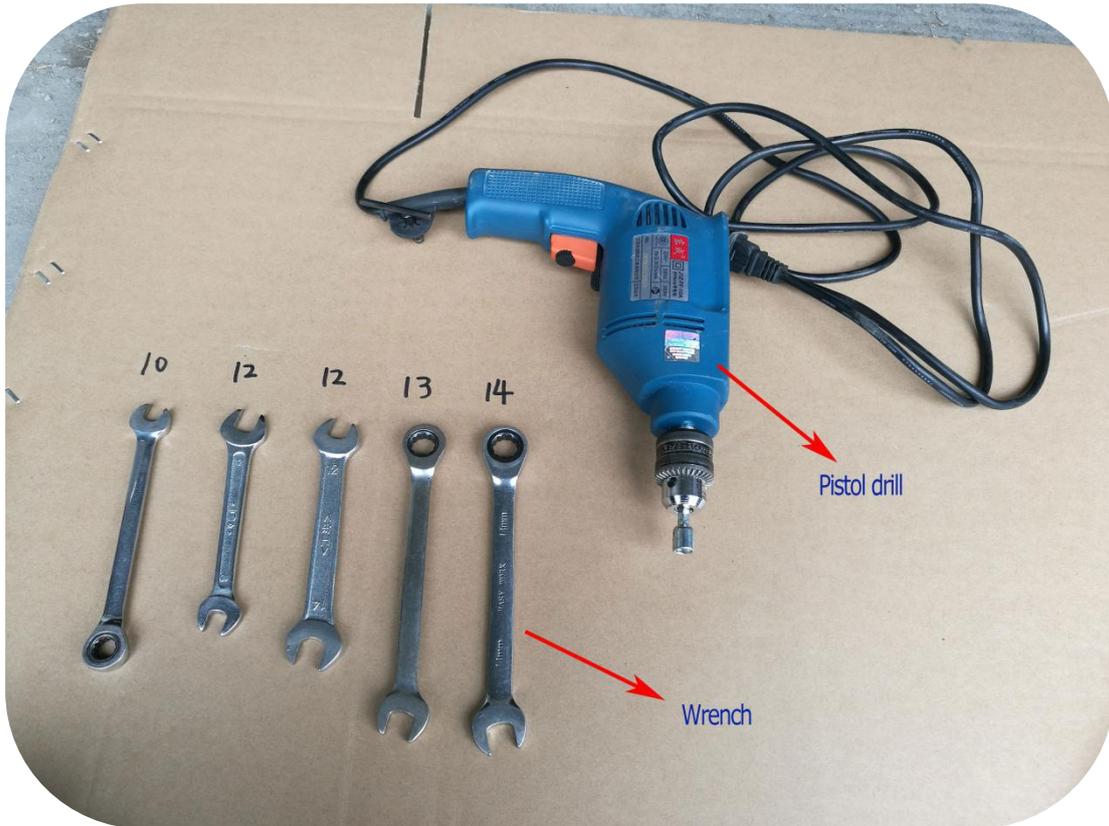

3. Now, let's start our installation:

Step 1: Remove Chrome bar from the cable.

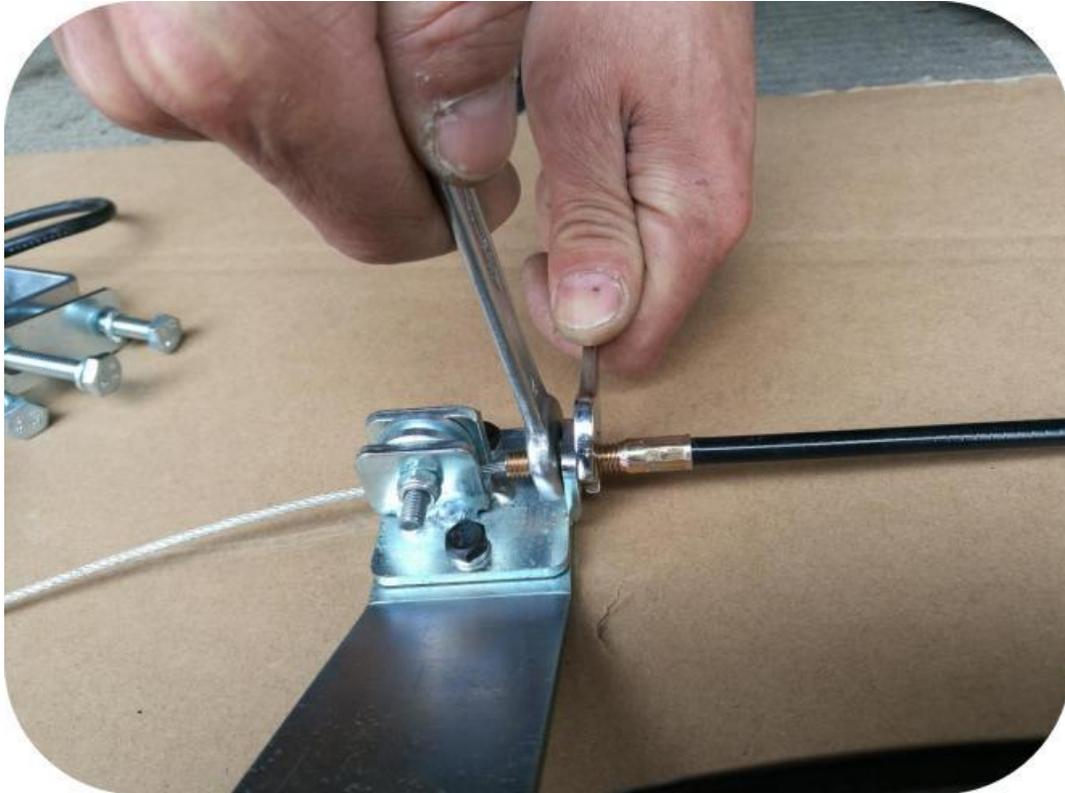

Step 2: Put the pedal kit to passenger side, and make the cable through below control console.



Step 3 : Pull out the cable, now you can see the cable in driver side.



Step 4 : In the driver side, now you can fix the Chrome bar to the inner wire like this:





Step 5: Fix two clips to pedal arm.




Notice:

Gas pedal and brake pedal could use this clip.



Clutch pedal **must** use this clip, gas and brake pedal could also use this clip.

Step 6: Connect inner wire to clips (The clips already fixed onto the pedal arm as step 5).

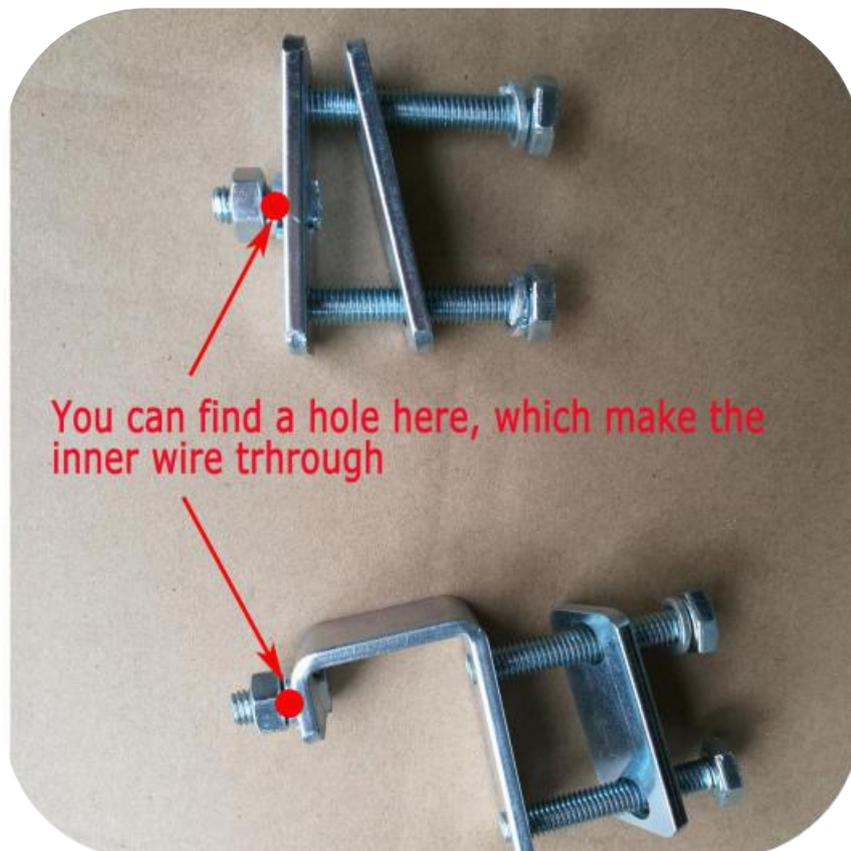


You can find a hole here, which make the inner wire through




See the inner wire go through hole on clip screw.



Make inner wire through the hole in clip screw.

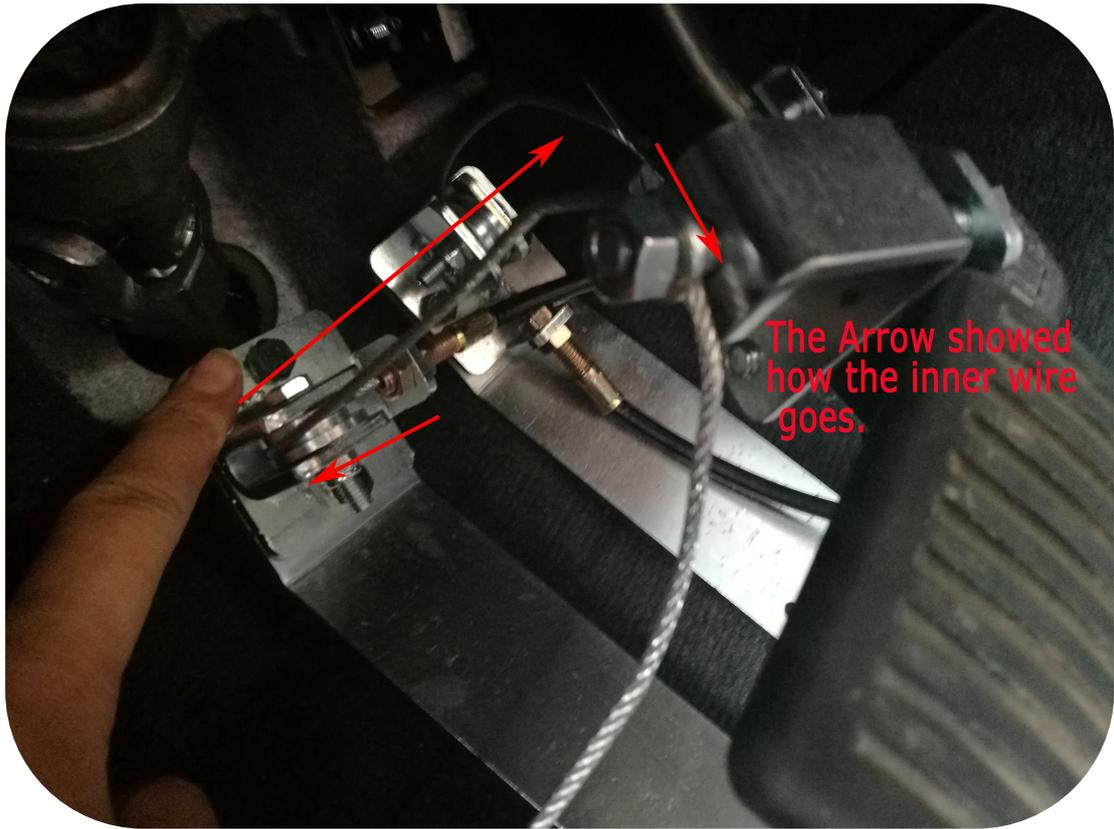

The Arrow showed how the inner wire goes.

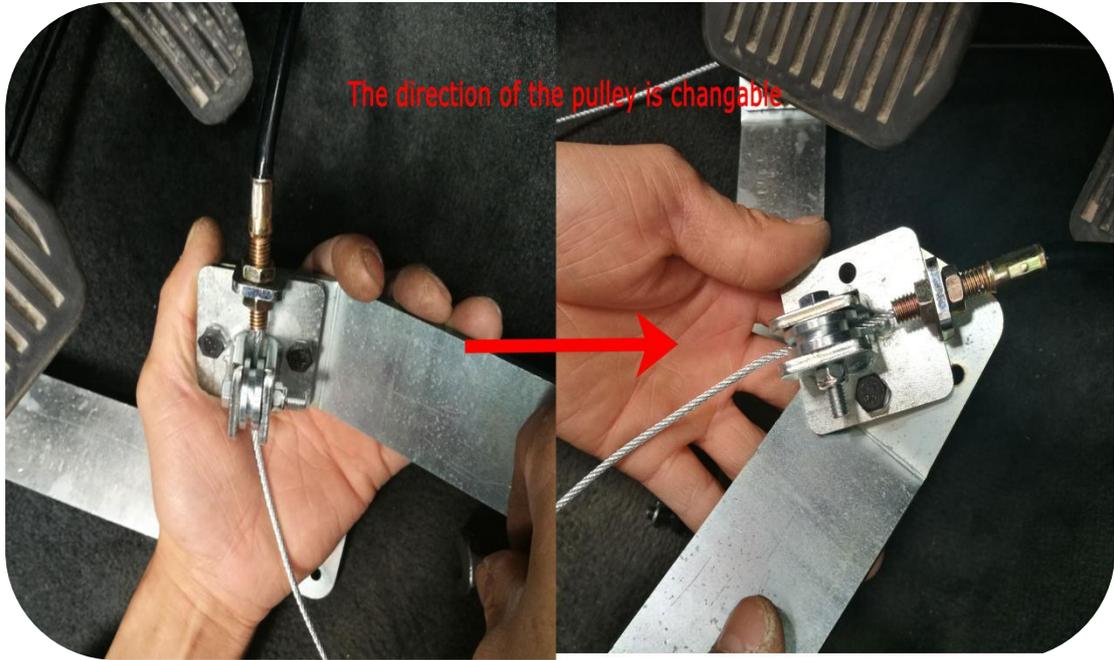

The direction of the pulley is changable.





Step 7: Fix Chrome bar to car floor with pistol drill.





Step 8: Pull the inner wire very tightly, otherwise, it will not work!!!



Step 9 : Fix the baseplate with self-tapping screw or rivet on the passenger side floor.




Step 10 : Test and done.




Caution:

You need to notice below information, that will make your dual brake working better.

Fix clips close to pedal,
more closer, more easier
to press.

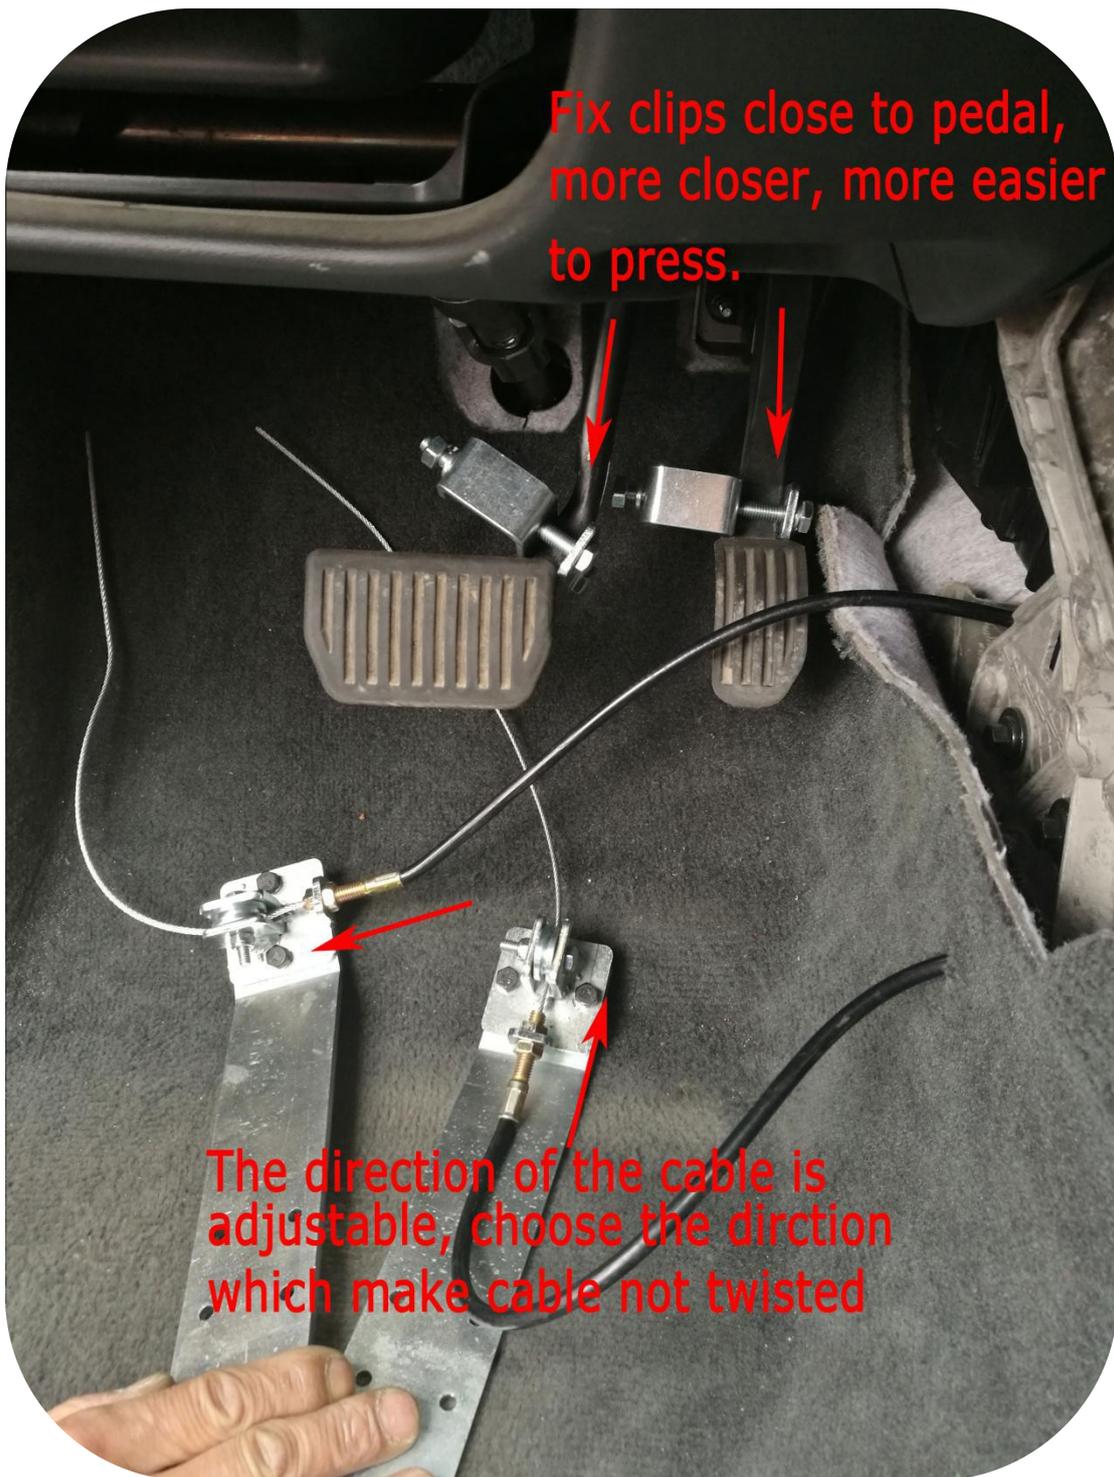

The direction of the cable is
adjustable, choose the direction
which make cable not twisted

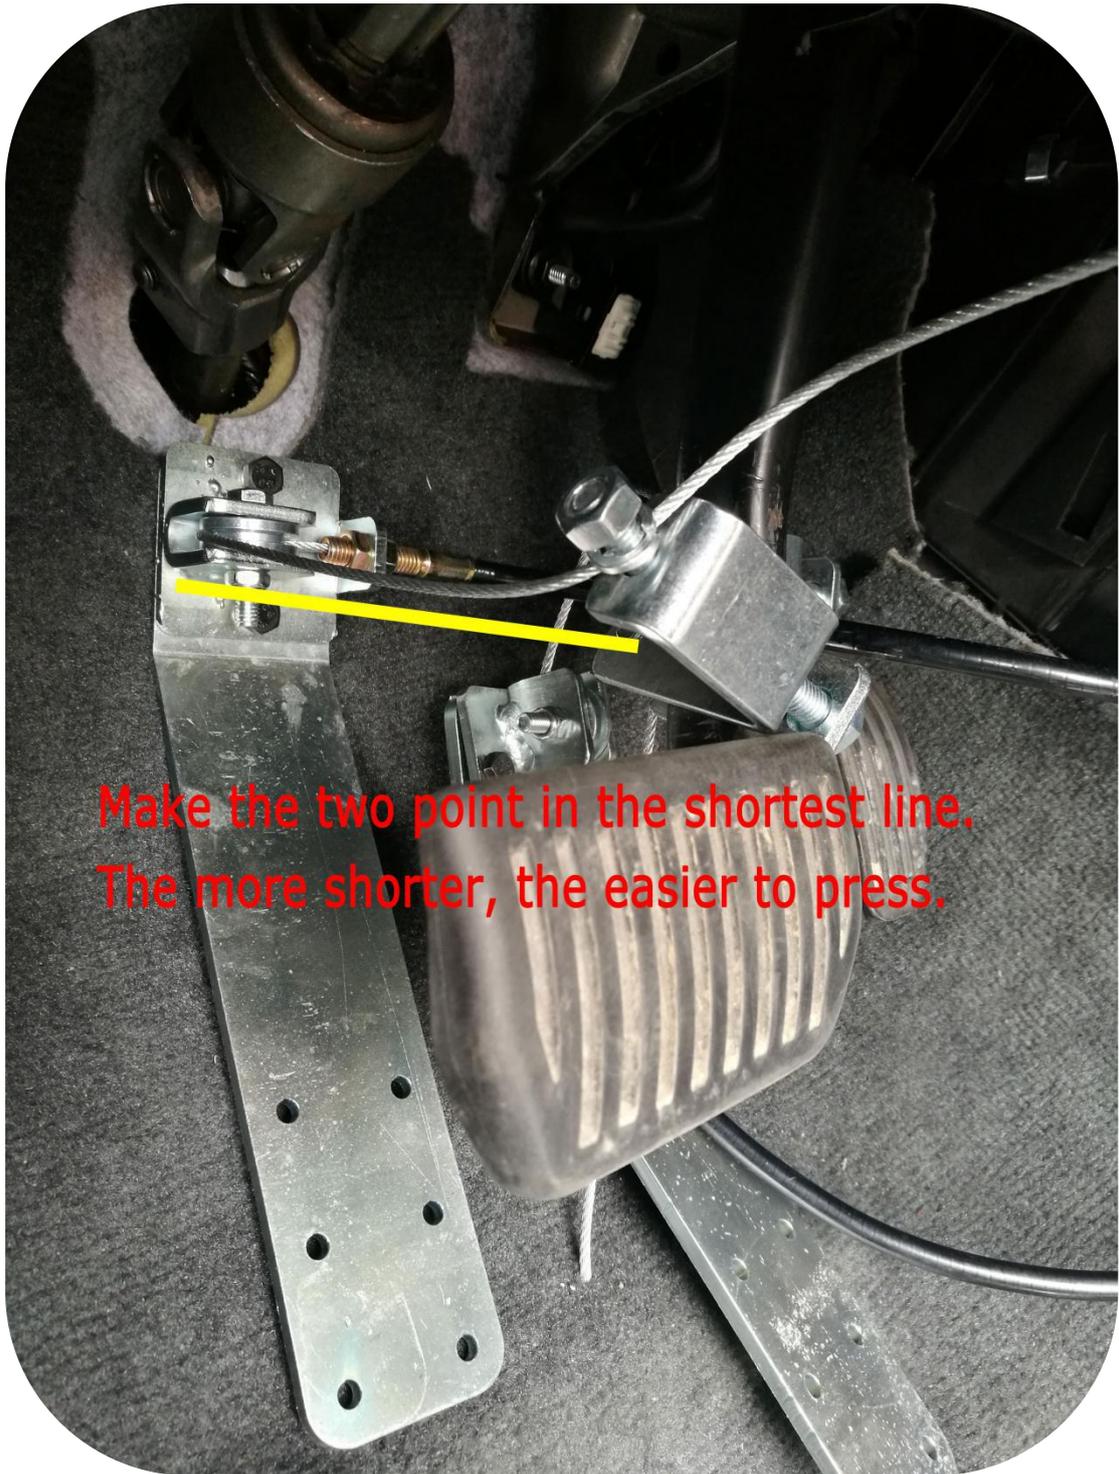

Make the two point in the shortest line.
The more shorter, the easier to press.



END.